 


LED Dance Floor



August 2006



DF 1000

LED Dance Floor



— Operating Manual —

www.zoommfgintl.com



DF 1000

LED Dance Floor

1. House size



2. Install

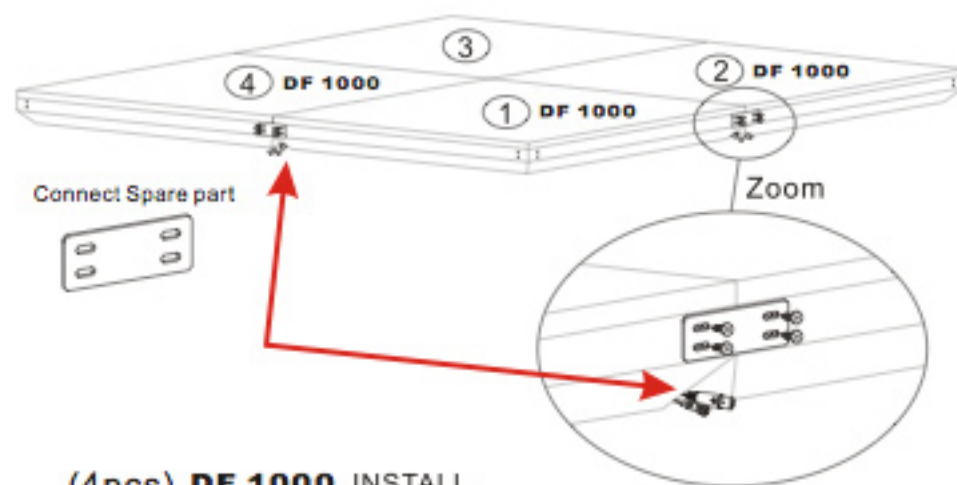
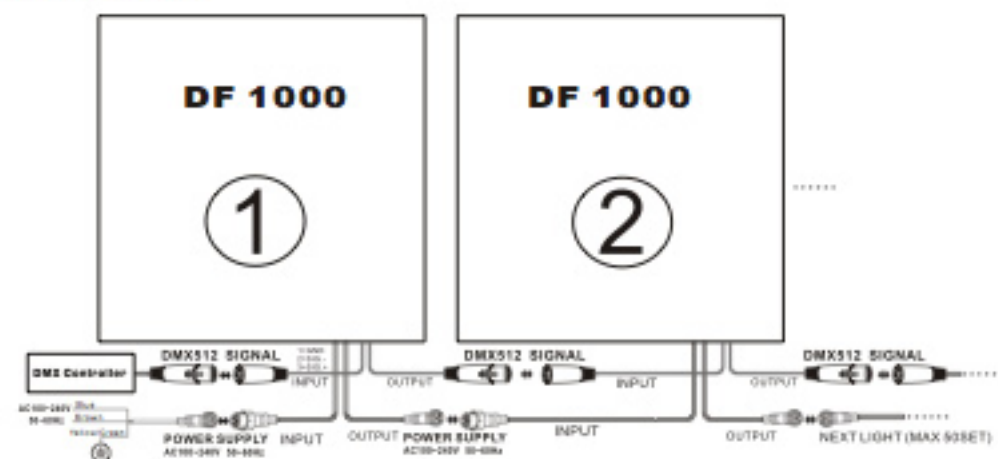


(4pcs) **DF 1000** INSTALL

DF 1000

LED Dance Floor

6. Wiring diagram

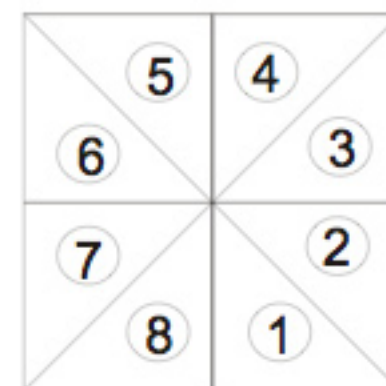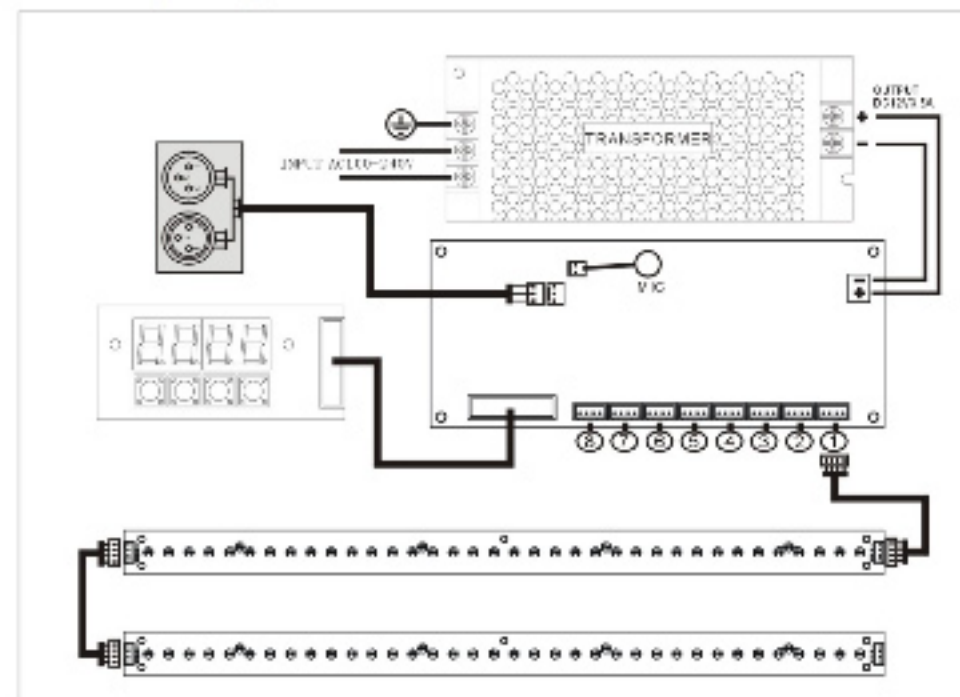

DF 1000

5. DMX channel allocation:

Channel 1: 0-2 light OFF

3-9 light ON (Ch2-Ch25 dimmer valid)

10-29 strobe (Ch2-Ch25 dimmer valid)

30-49 fade in and fade out (Ch2-Ch25 dimmer no valid)

50-69 auto 7 color change (Ch2-Ch25 dimmer no valid)

70-79 chase1, 80-89 chase2, 90-99 chase3,

100-109 chase4, 110-119 chase5, 120-129 chase6,

130-139 chase7, 140-149 chase8, 150-159 chase9,

160-169 chase10, 170-179 chase11, 180-189 chase12,

190-199 chase1-chase12 (Ch2-Ch25 dimmer no valid)

200-209 sound color, 251-255 sound strobe (Ch2-Ch25 dimmer no valid)

Channel 2:

DMX 4CH Mode :0-255 ①-⑧ red dimmer

DMX 13CH Mode :0-255 ①-② red dimmer

DMX 25CH Mode :0-255 ① red dimmer

Channel 3:

DMX 4CH Mode :0-255 ①-⑧ green dimmer

DMX 13CH Mode :0-255 ①-② green dimmer

DMX 25CH Mode :0-255 ① green dimmer

Channel 4:

DMX 4CH Mode :0-255 ①-⑧ blue dimmer

DMX 13CH Mode :0-255 ①-② blue dimmer

DMX 25CH Mode :0-255 ① blue dimmer

Channel 5:

DMX 13CH Mode :0-255 ③-④ red dimmer

DMX 25CH Mode :0-255 ② red dimmer

Channel 6:

DMX 13CH Mode :0-255 ③-④ green dimmer

DMX 25CH Mode :0-255 ② green dimmer

Channel 7:

DMX 13CH Mode :0-255 ③-④ blue dimmer

DMX 25CH Mode :0-255 ② blue dimmer

Channel 8:

DMX 13CH Mode :0-255 ⑤-⑥ red dimmer

DMX 25CH Mode :0-255 ③ red dimmer

Channel 9:

DMX 13CH Mode :0-255 ⑤-⑥ green dimmer

DMX 25CH Mode :0-255 ③ green dimmer


Channel 10:

DMX 13CH Mode :0-255 ⑤-⑥ blue dimmer

DMX 25CH Mode :0-255 ③ blue dimmer


Channel 25:

DMX 25CH Mode :0-255 ⑧ blue dimmer

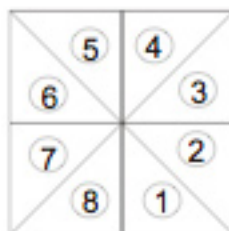

DF 1000


3. Control panel

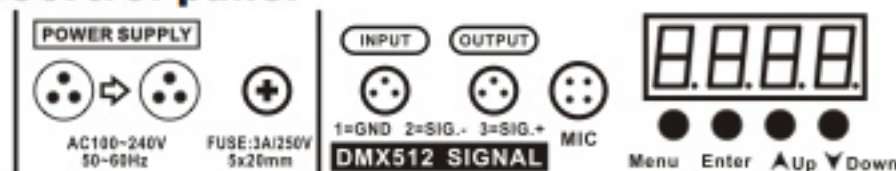


- To adjust the personal setting of the DF 1000 use keys located on the control panel. Functions see menu on the following page.

- To enter the menu press "Menu" key one time. Use keys "▲ Up" and "▼ Down" to move within the menu. Use key "Enter" to select the function and to recall the next menu section. To escape press key "Menu".

Menu navigation

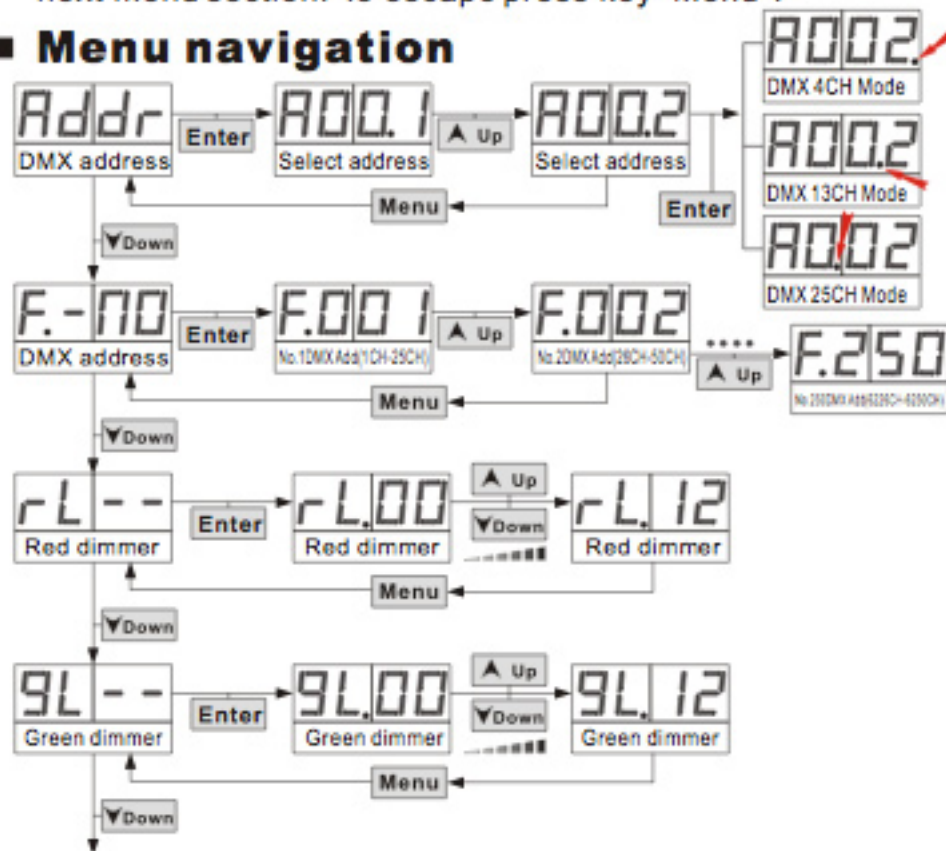

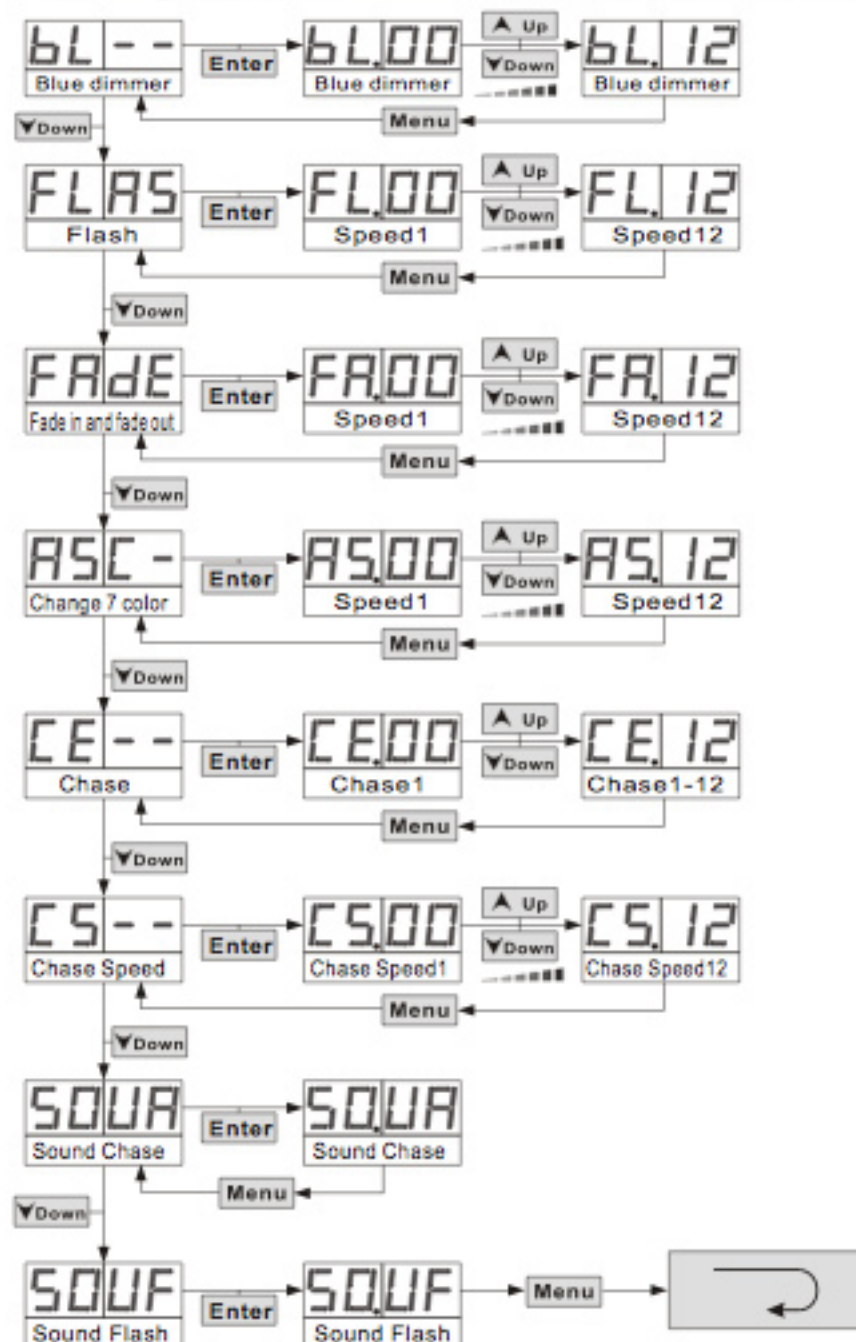

4. Function:

Manual mode

1	FL12	Red dimmer
2	GL12	Green dimmer
3	BL12	Blue dimmer

Auto mode

1	FL12	Flash
2	FA12	Automatic fade in and fade out
3	AS12	Auto change 7 color
4	CE12	Chase lights
5	CS12	Chase lights speed

Sound control mode

1	SQUA	Sound change 7 color
2	SQUF	Sound 7 color flash

Synchronization mode(master and slave)

1	Master light	Choose same as (manual ,auto, sound control) mode way
2	All slave lights	ADD1

DMX 512 mode

DMX Addressing:

Enter DMX address by means of the keys "▲ Up" and "▼ Down". Confirm a store by pressing key "Enter".